


Calphalon®

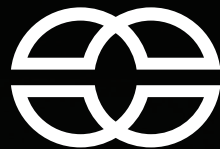

INTELLICRISP™ WAFFLE MAKER



INSTRUCTION MANUAL

MODEL: CKCLWF1

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	3
POLARIZED PLUG	4
PRODUCT DIAGRAM	5
USAGE INSTRUCTIONS	
PREPARING YOUR INTELLECRISP™ WAFFLE MAKER	6
WAFFLE COOKING TIMES	6
HOW TO USE YOUR INTELLECRISP™ WAFFLE MAKER	6
CLEANING & MAINTENANCE	7
TIPS FOR BETTER BAKING RESULTS	7
TROUBLESHOOTING	7
WARRANTY	8

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
5. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
6. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors or for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use. Misuse can cause injuries. Intended for household countertop use only. Keep 6 inches (152 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.
13. **WARNING:** Extreme caution must be used when moving an appliance or removing a pan, containing hot oil or other hot liquids. Always protect your hands with non-slip oven mitts or similar.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY



POLARIZED PLUG



This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

POWER CORD INSTRUCTIONS:

A short power-supply cord or detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a long detachable power-supply cord or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
- If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

Do not pull, twist or otherwise abuse the power cord.

NOTICES

1. Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your waffle maker to prevent possible damage to the surface.
2. During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

PRODUCT DIAGRAM

1. Shade Selector Dial with 5 Browning Settings
2. LCD Display and Timer
3. Ceramic Coated Cooking Plates
4. Lid Handle
5. Storage Lock for easy storage (DO NOT LOCK DURING USE)



PREPARING YOUR INTELLICRISP™ WAFFLE MAKER

- Remove all packaging before using your waffle maker.
- Wipe Cooking Plate with a damp paper towel or soft cloth to clean. DO NOT use steel wool or other metal pads as this may scratch the surface. Dry thoroughly and close lid.
- The exterior of the waffle maker can be wiped clean with a damp cloth.
- Place waffle maker on a flat surface and do not put anything on top of it.
- Never immerse the waffle maker, power cord or plug in water or any other liquid.

WAFFLE COOKING TIMES

Waffle Shade	Preheat	Cooking Time
Light	Yes	2 mins 30 sec.
Light-Medium	Yes	3 mins 30 sec.
Medium	Yes	4 mins 45 sec.
Medium-Dark	Yes	5 mins 30 sec.
Dark	Yes	6 mins 45 sec.

NOTE: These times are from when the unit determines batter has been added.

HOW TO USE YOUR INTELLICRISP™ WAFFLE MAKER

- Always ensure the Shade Selector Dial is turned OFF before plugging in the waffle maker.
- Use the Shade Selector Dial to select the desired shade of waffle from “LIGHT” to “DARK”. Once selected, the screen will show PREHEATING and the preheating process will begin.
- We suggest using one of the middle shades when cooking your first waffle, to determine preference. The waffle maker will adjust time based on the selected shade.
- Once the PREHEATING process is completed, the LCD screen will display READY TO COOK, indicating that you can add the batter.
- Open the lid, pour approximately ½ cup of batter evenly on the center of each waffle square and close the lid. The batter should just cover the peaks of the Cooking Plates. For best results, wait until READY TO COOK is shown on screen before adding batter. If batter is added prior to READY TO COOK being displayed on the screen, the waffle maker may not accurately sense doneness or calculate proper cooking time.
- Once the lid is closed, the screen will display COOKING and the countdown will begin.
NOTE: When closing the lid, always ensure the Storage Lock is in the unlock position.
- You can lift the lid during the cooking process to check on the waffle; however, it may affect the final cooking result.
- At the end of the cooking cycle, COOKING COMPLETE will be displayed on the screen, and it will beep.
- Open the lid and carefully remove your waffles using non-metallic utensils.

NOTE: If you would like to make additional batches of waffles, the waffle maker may need to preheat again after cooking is complete for the previous batch. Close the lid and wait until READY TO COOK is displayed on the screen before adding batter.

- Unplug and allow to cool before cleaning.
- **CAUTION:** DO NOT USE METAL UTENSILS AS THEY CAN SCRATCH THE NON-STICK COATING.
- **NOTE:** For further details on product features and usage instructions, please visit www.calphalon.com

CLEANING & MAINTENANCE

CAUTION: DO NOT IMMERSE ANY PART OF THE WAFFLE MAKER IN WATER OR ANY OTHER LIQUID.

- Always unplug your waffle maker from the electrical outlet, and allow it to cool before cleaning.
- Always clean the waffle maker after each use.
- Wipe Cooking Plate and overflow with a damp paper towel or soft cloth to remove food residue. DO NOT use steel wool or other metal pads as this may scratch the surface.
- The exterior of the waffle maker can be wiped clean with a damp cloth.
- To store the waffle maker, close lid gently and push Storage Lock on the base of the waffle maker until it clicks into the lid.
- No other servicing should be performed.

NOTE: The waffle maker is easier to clean when slightly warm.

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See Warranty Section.

TIPS FOR BETTER BAKING RESULTS

- When using your waffle maker for the first time, we suggest using one of the middle shades to determine cooking preference.
- Always wait until PREHEATING process is complete before adding batter.
- Pour the batter evenly in the center of each waffle square.
- To avoid over flow, the amount of batter should not go over the separation line between the waffle squares.
- Increase or decrease shade selection to your brownness preference.

TROUBLESHOOTING

After several cooking cycles, timer is not counting down/sensing that batter has been added.	Reset your waffle maker by unplugging it from the wall outlet. Leave unplugged for 15 seconds, and then plug the waffle maker back into the wall outlet.
After several cooking cycles, waffles appear darker, while on the same shade setting.	Turn the shade selector dial to a shade lighter from the previously selected shade.
Batter overflows.	Depending upon thickness of batter mix, simply add less batter.

WARRANTY

3 YEAR LIMITED WARRANTY

Calphalon ("Calphalon") warrants that for a period of three year from the date of purchase, this product will be free from defects in material and workmanship. Calphalon, at its option, will repair or replace this product or any component of the product found to be defective during the guarantee period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive guarantee. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this guarantee. This guarantee is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain satisfaction guarantee performance. Calphalon dealers, service centers, or retail stores selling Calphalon, do not have the right to alter, modify or any way change the terms and conditions of this guarantee. This guarantee does not cover damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Calphalon or an authorized Calphalon service center. Further, the guarantee does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Calphalon's Liability? Calphalon shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory guarantee or condition. Except to the extent prohibited by applicable law, any implied guarantee or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above guarantee. Calphalon disclaims all other guarantees, conditions or representations, express, implied, statutory or otherwise. Calphalon shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied guarantee lasts, so the above limitations or exclusion may not apply to you. This guarantee gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

If you have any questions regarding the limited warranty, please call 1-800-809-7267.