


Calphalon®

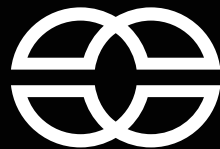

EVEN SEAR MULTI GRILL



INSTRUCTION MANUAL

MODEL: CKCLIG1

TABLE OF CONTENTS


IMPORTANT SAFEGUARDS	3
POLARIZED PLUG	4
PRODUCT DIAGRAM	5
USAGE INSTRUCTIONS	
PREPARING YOUR EVEN SEAR MULTI GRILL	6
HOW TO USE YOUR EVEN SEAR MULTI GRILL	6
TO PROGRAM THE TIMER	6
FOR MORE COOKING SURFACE	7
CLEANING & MAINTENANCE	7
SUGGESTED COOKING TIMES	8
WARRANTY	9

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
5. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
6. Unplug from outlet when not in use, before putting on or taking parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors or for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use. Misuse can cause injuries. Intended for household countertop use only. Keep 6 inches (152 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Always protect your hands with non-slip oven mitts or similar.

**SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY**

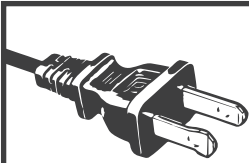

POLARIZED PLUG

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

POWER CORD INSTRUCTIONS

A short power-supply cord or detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a long detachable power-supply cord or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
- If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

Do not pull, twist or otherwise abuse the power cord.

NOTICES

- Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your Multi Grill to prevent possible damage to the surface.
- During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

PRODUCT DIAGRAM

- 1. Temperature Control Dial
- 2. LED Indicator Lights
- 3. Add (+), Subtract (-), and Cancel Timer Buttons
- 4. Removable Cooking Plates*
- 5. Removable Drip Tray*
- 6. Hinge Release Lever
- 7. Cooking Plate Release Buttons
- 8. Lid Handle
- 9. Cord Storage (underneath, not shown)

*These parts can be replaced on Calphalon.com or at 1-800 809-7267



Removable Grill Plates



Removable Griddle Plates



PREPARING YOUR EVEN SEAR MULTI GRILL

NOTE: Before you plugging in the Multi Grill, make sure Temperature Control Dial is in the OFF position.

- Remove all the packaging before using the Multi Grill.
- Remove and wash Removable Cooking Plates and Removable Drip Tray. Immerse them in warm, soapy water and rinse with clean water. Use a soft cloth to dry thoroughly.
- Re-attach the Removable Cooking Plates by aligning the plate guides with the clips, and pushing the plates gently into position.
- Place the appliance on a flat, non-temperature-sensitive surface, and do not put anything on top of it.
- Never immerse the grill, power cord or plug in water or any other liquid.

HOW TO USE YOUR EVEN SEAR MULTI GRILL

NOTE: Always ensure the Temperature Control Dial is in the OFF position before plugging in, otherwise PREHEATING cycle will start immediately after appliance is plugged in.

- Insert the Removable Drip Tray into the slot at the rear of the Multi Grill. It collects excess fat.

NOTE: Do not use your Multi Grill without the Removable Drip Tray in place.

- With the lid closed, plug in the Multi Grill into the outlet, and use the Temperature Control Dial to select the desired cooking temperature, ranging from Low to 450°F.
- Once the Multi Grill is turned on and desired temperature selected, PREHEATING will appear on the screen and the preheating process will start.
- When the Multi Grill reaches the selected temperature, an audible alert will sound, and the screen will change from PREHEATING to READY TO COOK.
- Always ensure the PREHEATING cycle is complete before placing the food on the Cooking Plate.
- Lift the lid and place the food onto the bottom Removable Cooking Plate. Then close the lid.

PROGRAM THE TIMER

- To Program the timer, use the "+" and "-" buttons to increase or decrease time. The time is displayed on the screen and counts up in 1 minute increments. For faster time selection, hold down the "+" or "-" buttons. Once time is selected, it will flash twice and then begin counting down.
- Once the programmed time has expired, an audible alert will sound, but the Multi Grill will operate continually at the selected temperature, without a defined shut off time.
- The countdown timer can be cancelled at any time by pressing the CANCEL TIMER button, but the Multi Grill will operate continually at the selected temperature, without a defined shut off time.
- To shut off the Multi Grill, turn the Temperature Control Dial counter-clockwise to OFF.
- If cooking with the lid closed, lift the lid after the food has cooked for the desired length of time, using the Lid Handle.
- Remove the food using non-metallic utensils.

NOTE: Never use metal tongs or a knife as these can cause damage to the ceramic coating.

FOR MORE COOKING SURFACE

- The Multi Grill can be opened to 180° (horizontal) for more cooking surface. To open to 180°, lift the Lid Handle to the open position, and with the other hand, slide the Hinge Release Lever up. Push the Lid Handle back and down until the Lid is laying horizontal beside the bottom cooking surface.

NOTE: Never leave the Multi Grill plugged in if it's empty or unattended. Turn the grill off and unplug it from outlet.

NOTE: For further details on product features and usage instructions, please visit www.calphalon.com.

During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few hours.

CLEANING & MAINTENANCE

- Always clean the Multi Grill after each use.
- Always unplug the Multi Grill, and allow it to cool before cleaning.
- For easy cleaning, open the Multi Grill and remove the Cooking Plates one at a time.
- To remove the bottom Cooking Plate press and hold the Cooking Plate Release Button on the side of the base of the Multi Grill. With the other hand, lift the bottom Cooking Plate from the base and pull forward. To remove top Cooking Plate, press and hold the Cooking Plate Release Button on the side of the top housing. With the other hand, pull the Cooking Plate slightly forward and then slide up and off.
- Immerse Cooking Plates in warm, soapy water and rinse with clean water. Wipe dry with a soft cloth.
- Slide out the drip tray and discard the contents. Immerse the drip tray in warm soapy water and rinse with clean water, or clean using the dishwasher. Wipe dry with a soft cloth. Wash after each use.
- Use a damp cloth to wipe clean the exterior of the Multi Grill as needed.
- Ensure that the Removable Cooking Plates are correctly re-inserted by aligning the plate guides with the clips, and pushing the plates gently to lock them into position.
- Close the lid, and insert the drip tray into the slot at the rear of the unit.
- Wrap the cord in the cord storage area at the bottom of the unit.
- No other servicing should be performed.

CAUTION: DO NOT IMMERSE EVEN SEAR MULTI-GRILL IN WATER OR ANY OTHER LIQUID.

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See Warranty Section.

SUGGESTED COOKING TIMES

NOTE: The following are meant to be used as a guideline only. Cooking time will depend on thickness of food.

	Food	Time
Vegetables	Asparagus	4-5 min
	Zucchini	3-5 min
	Yellow Squash	3-5 min
Seafood	Shrimp	1-2 min
	Scallops	1-2 min
	Salmon	6-10 min
Poultry	Chicken Breast	6-8 min
	Turkey Burgers	4-6 min
Meat	Beef Burger	4-6 min
	Sausages	3-7 min
	Bacon	6-8 min
	Skirt Steak	3-5 min
	NY Strip Steak	6-8 min
	Pork Chops	5-7 min

WARRANTY

3 YEAR LIMITED WARRANTY

Calphalon ("Calphalon") warrants that for a period of three years from the date of purchase, this product will be free from defects in material and workmanship. Calphalon, at its option, will repair or replace this product or any component of the product found to be defective during the guarantee period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive guarantee. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this guarantee. This guarantee is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain satisfaction guarantee performance. Calphalon dealers, service centers, or retail stores selling Calphalon, do not have the right to alter, modify or any way change the terms and conditions of this guarantee. This guarantee does not cover damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Calphalon or an authorized Calphalon service center. Further, the guarantee does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Calphalon's Liability? Calphalon shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory guarantee or condition. Except to the extent prohibited by applicable law, any implied guarantee or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above guarantee. Calphalon disclaims all other guarantees, conditions or representations, express, implied, statutory or otherwise. Calphalon shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied guarantee lasts, so the above limitations or exclusion may not apply to you. This guarantee gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.