

21. The glass door is made of tempered glass. Always inspect the glass door for chips, cracks or any other damage. Do not use the toaster oven if the glass door is damaged, as the glass may shatter during use.
22. If your toaster oven is equipped with a STAY-ON feature, toaster oven will stay ON if knob is turned counter-clockwise past zero. Exercise caution when using this feature and do not operate unattended for long periods.
23. Do not use with a programmer, timer, wireless plug adapter or outlet that allows control remotely, or connect to a circuit that is regularly switched on and off by the utility.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

NORTH AMERICAN MODELS WITH POLARIZED PLUGS:



POLARIZED PLUG

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

POWER CORD INSTRUCTIONS:

A short power-supply cord or detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used:

- a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- b. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
- c. If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

Do not pull, twist or otherwise abuse the power cord.

NOTICES

1. Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your toaster oven to prevent possible damage to the surface.
2. During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

CLEANING & MAINTENANCE

- Clean oven and any accessory used after each use.
- ALWAYS unplug the oven, and allow it to cool before cleaning.
- To clean exterior of oven, wipe with a damp cloth. DO NOT IMMERSE IN WATER. Make sure to only use mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit.
- To clean Wire Rack, Baking Pan, Dehydrate Rack, or Pizza Pan remove from the Oven and immerse in warm, soapy water and wipe with soft cloth or sponge. These accessories may also be washed in the top rack of the dishwasher. Dry thoroughly.
- Remove the Removable Crumb Tray and shake off crumbs. Wash with soapy water, and dry thoroughly. Cleaning the Crumb Tray often will avoid any accumulations. This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See warranty available online.

CHANGING LIGHT BULB

- Remove all accessories from the Countertop Oven.
- Remove Interior Light bulb cover by turning it counter-clockwise, and then pull out Interior Light bulb.
- Insert new 25w 120v G9 bulb, per instructions on light bulb package. Then replace Interior Light bulb cover, turning clockwise to tighten.

NOTE: This should be done when the oven has been off for a while and no longer hot.

3 YEAR WARRANTY

For additional information on your Calphalon Cool Touch Countertop Oven and detailed warranty information, visit us at www.calphalon.com or call us at 1-800-809-7267



P.N. 200530

Calphalon®



COOL TOUCH COUNTERTOP OVEN

USER MANUAL

WWW.CALPHALON.COM

MODEL: TSCLTVCT2



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. ⚠ This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs. Always protect your hands with non-slip oven mitts or similar.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.
5. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord. Always grasp the plug and pull to disconnect.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors or for commercial purposes.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance or removing a pan, containing hot oil or other hot liquids. Always protect your hands with non-slip oven mitts or similar.
12. Do not use appliance for other than intended use. Misuse can cause injuries. Intended for household countertop use only. Keep 8 inches (203 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.
13. Oversize foods or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.
14. A fire may occur if the toaster-oven is covered, touching or near flammable materials, including curtains, draperies, towels, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
16. Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
17. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
18. Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials that may catch fire or melt.
19. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
20. Empty the crumb tray after each use.

PRODUCT DIAGRAM

- | | |
|--|---|
| 1. LCD Screen Display | 8. *Dehydrate Rack |
| 2. Step Cook, Keep Warm, Defrost, Light, Start, Cancel/Off Buttons | 9. *Baking Pan |
| 3. Function Selector Dial | 10. *Pizza Pan |
| 4. Turbo Convection Selector Button | 11. *Removable Wire Rack |
| 5. Time/Temperature Selector Button | 12. *Removable Crumb Tray |
| 6. Time/Temperature Control Dial | 13. *Interior Light (G9 bulb 25w 120v) (not shown in image) |
| 7. Two Rack Positions | |

*These parts can be replaced on Calphalon.com or at 1-800-809-7267

LCD DISPLAY

- | | |
|---|--------------------------|
| a. Function Options | d. Timer |
| b. Function Indicator | e. Turbo Convection Icon |
| c. Shade Setting or Temperature Setting | |


PREPARING YOUR COUNTERTOP OVEN

- Remove all packaging before using the Countertop Oven.
- Clean Countertop Oven and accessories per cleaning instructions in this manual.
- Plug the Countertop into the electrical outlet.

NOTE: Do not immerse the cord, plug or body of the unit in water.

- Dry the unit thoroughly before using.
- Select a location for the countertop. The location should be in an open area on a flat counter where the plug will reach an outlet.
- Plug the countertop oven into an electrical outlet.

NOTE: Only the top, left side, right side and front of the oven are cool touch.

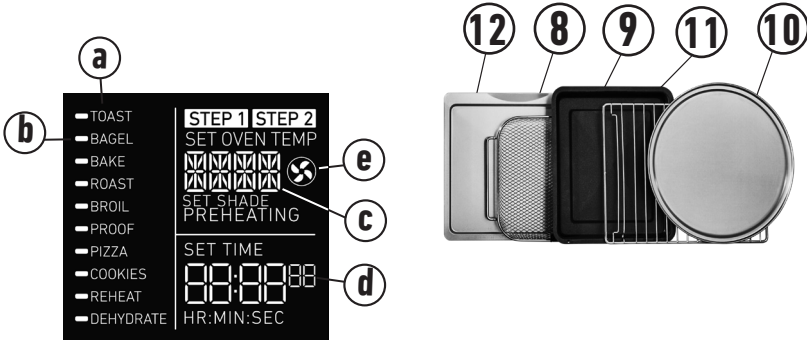

USING YOUR COUNTERTOP OVEN

- Once the Countertop Oven is plugged in, the LCD screen will illuminate and the Start Button LED light will flash.
- The Function Options will be displayed on the LCD Screen with The Function Indicator on the default preset TOAST function.
- Turn the Function Selector Dial to select one of the following 10 options: Toast (Default), Bagel, Bake, Roast, Broil, Proof, Pizza, Cookies, Reheat, And Dehydrate. The Function Indicator will scroll as the Function Selector Dial is turned.
- To select Step Cook, Keep Warm or Defrost, press the appropriate button below the LCD display.
- Once the desired function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature or shade (for Toast and Bagel functions). Turn clockwise to increase and counter-clockwise to decrease.
- Press the START button to begin preheating. PREHEATING will display on the LCD screen. Ensure the Oven door is closed for preheating. Oven does not preheat for BAGEL and TOAST functions. For these settings, food items may be placed inside the Oven immediately after pressing START.
- Once the Countertop Oven is preheated, it will beep and PREHEATING will disappear from the LCD screen.
- You may set the timer before the oven begins preheating, during preheating, or once preheating is complete. Press the Time/ Temperature Selector Button to change the Time/ Temperature Selector Dial to time selection. Turn dial clockwise to increase cooking time and counter-clockwise to decrease cooking time.

NOTE: Toast and Bagel settings automatically select time based on shade setting.

- Once preheating is complete, and timer is set, put food into the Countertop Oven, using the Wire Rack, Baking Pan, Pizza Pan or Dehydrator Rack. When using the Baking Pan or Pizza Pan, always place on top of the Wire Rack. Never place food or accessories directly on the Quartz Heating elements. To use the Dehydrator Rack, put food into the Rack and then slide it into the top Rack Position.
- Once food is inside, close the door and press the START button again. The Timer will begin counting down.
- Press the Turbo Convection Button for better air circulation and crispier food.
- Once the allotted time has expired, the Countertop Oven will beep, and it will stop heating, but the display will remain lit for a period of time and then it will time out. You may press Cancel/ OFF to turn off the display before it times out.
- Use pot holders to carefully remove food from the Countertop Oven.
- The LCD screen light will turn off after 90 seconds of inactivity. Press any button to wake up the appliance.
- Press the Cancel/OFF Button to turn off the Countertop Oven.

NOTE: For further details on product features and usage instructions, please visit www.calphalon.com